


Induction drive

1×230 V, 50 Hz

Rotation direction for inductive motors

| | | | |
|------------------|-------------------------|----------------|-------------------------|
| down ↓ | W = 3 V = 2 U = 1 | up ↑ | W = 3 V = 1 U = 2 |
|------------------|-------------------------|----------------|-------------------------|

For below wiring diagrams,
the rotation direction is downwards.

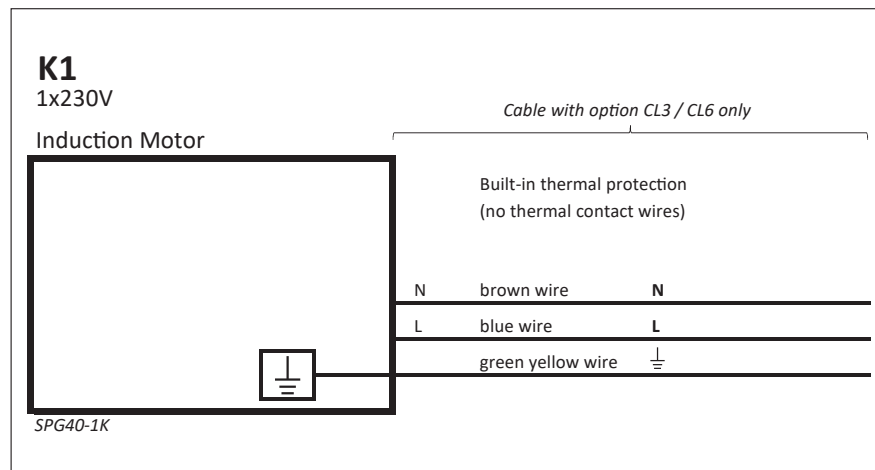

Contact

Headquarters

Hoval Aktiengesellschaft
Austrasse 70
9490 Vaduz
Liechtenstein
Tel. +423 399 24 00
Fax +423 399 27 31
info.er@hoval.com
www.hoval-energyrecovery.com

Sweden

Hoval AB
Hedenstorpsvägen 4
555 93 Jönköping
Sweden
Tel. +46 36 375660
Fax +46 36 375668
info.se@hoval.com
www.hoval-energyrecovery.com

China

Hoval Oriental Beijing Heating Tech Co., Ltd
Rm.1408 Guangming Hotel
Liangmaqiao Road Chaoyang District
100125 Beijing
P.R. China
Tel: +86 10 646 36 878
Fax: +86 10 646 42 270
info@hoval.com.cn
www.hoval.com.cn